



Wiring Diagram

Main wiring diagram

A328


Cabriolet

1987

Number

87-51

May 15, 1987

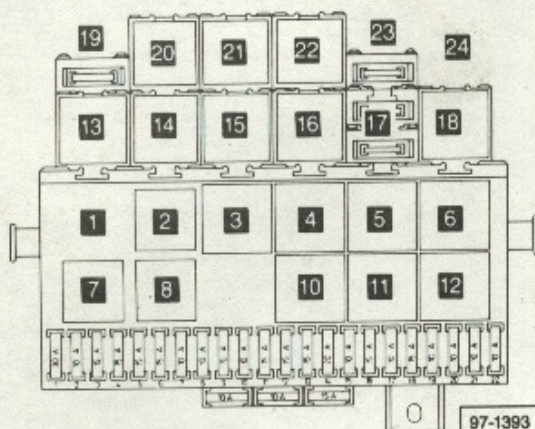

Fuse arrangement

according to numbers on fuse panel as seen from left to right:


	Amp.
1 Radiator fan	30
2 Stop lites	10
3 Cigarette lighter, radio, clock, interior lites, central locking system	15
4 Emergency flasher system	15
5 Electric fan pump	15
6 Open	
7 Tail, parking and side marker lites, left	10
8 Tail, parking and side marker lites, right	10
9 High beam right, high beam indicator lite	10
10 High beam left	10
11 Wind. wipers and washer	15
12 Open	
13 Rear window defogger, heated rear view mirror	15
14 Fresh air fan, glove compartment lite	20
15 Back-up lites, shift console lite (Auto. Transmission)	10
16 Horn	15
17 Open	
18 Seat belt warning lite	15
19 Turn signals, brake warning lite	10
20 License plate lites	10
21 Low beam left	10
22 Low beam right	10

Separate fuses above fuse panel

13 Power windows	30
17 A/C	30

Relay locations on fuse/relay panel

- 1 — Open
- 2 — Fuel pump
- 3 — Seat belt warning system
- 4 — Upshift indicator
- 5 — A/C relay
- 6 — Dual horn
- 7 — Open
- 8 — Load reduction
- 10 — Intermittent wiper
- 11 — Rear wiper/washer
- 12 — Emergency/turn signal
- 13 — Power window relay
- 14 — Hot pulse relay
- 15 — Fuel inj. power supply relay
- 16 — Idle stabilizer relay
- 17 — A/C Thermofuse
- 18 — Open

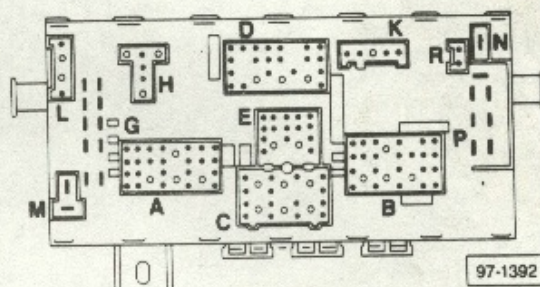

Connections and plugs on fuse/relay panel

- A — For dashboard wiring harness (blue)
- B — For dashboard wiring harness (red)
- C — Engine compartment wiring harness, left (yellow)
- D — Engine compartment wiring harness, right (white)
- E — Rear wiring harness (black)
- G — Single connector
- H — Air conditioner (brown)
- K — Seat belt warning system (colorless)
- L — Headlite/terminal 56, dimmer switch/terminal 56b (black)
- N — Open position
- P — Single connector/terminal 30
- R — Open position

Description	Current track
2-way idle speed boost valve	14
Alternator	1,2
Alternator warning lite	42
Auxiliary air regulator	25
Back-up lite switch	102
Back-up lite, left	101
Back-up lite, right	100
Battery	3
Brake and parking brake indicator lite	65
Brake fluid level warning contact	66
Brake lite switch	112
Brake lite, left	113
Brake lite, right	114
Cigarette lighter lite	72
Clock lite	48
Cold start valve	29
Control pressure regulator	26
Coolant overheat warning lite	46
Coolant temperature gauge	45
Coolant temperature sending unit	55
Digital clock	47
Door contact switch, left front	60,61
Door contact switch, right front	59
Emergency flasher relay	104,105
Emergency flasher switch	103-107
Emergency flasher warning lite	107
Engine oil pressure control unit	38,39
Engine oil pressure gauge	78,79
Engine oil pressure gauge lite	80
Engine oil pressure sensor	78
Engine oil pressure switch (0.3 bar)	53
Engine oil pressure switch (1.8 bar)	54
Engine oil pressure warning lite	40
Engine oil temperature gauge	75,76
Engine oil temperature gauge lite	77
Engine oil temperature sensor	75
Fresh air blower series resistance	116,117
Fresh air control lever lite	71
Fresh air fan	118
Fresh air fan switch	116-118
Fuel enrichment switch	15
Fuel gauge	44
Fuel gauge sending unit	23
Fuel injection power supply relay	17-19
Fuel pump	22
Fuel pump relay	19-21
Hall generator	7,8
Headlite dimmer/flasher switch	86,87
Headlite high beam warning lite	41
Headlite switch lite	115
Headlite, left	88,91
Headlite, right	89,92
High-beam headlite, left	90
High-beam headlite, right	93
Hi-mounted brake lite	112
Horn button	131
Horn relay	128-130
Horns	125,126
Hot pulse relay	30,31

Description	Current track
Idle boost control unit	13,14
Ignition coil	9-12
Ignition control unit	6-10
Ignition distributor	10-12
Ignition/starter switch	32-34
Instrument panel lite	49
Instrument panel lite dimmer switch	70
Interior lite, front	58,59
License plate lite	83,84
Lite switch	67-70
Load reduction relay	67-69
Luggage compartment lite	85
Luggage compartment lite switch	85
OXS control unit	15-18
OXS Elapsed mileage counter	51,52
OXS elapsed mileage indicator	50
OXS frequency valve	18
OXS thermostich	16
Oxygen sensor	17
Parking brake warning lite switch	64
Parking lite, left	98
Parking lite, right	95
Radiator cooling fan	132
Radiator cooling fan thermostich	132
Rear window defogger indicator lite	134
Rear window defogger switch	133-135
Rear window defogger switch lite	133
Rear window heater element	136
Refrigerator 12V connector	74
Safety belt switch, left	62
Seat belt warning lite	63
Seat belt warning relay	61-63
Sidemarkers lites, front	94,99
Spark plug connectors	10-12
Spark plugs	10-12
Starter	4,5
Tachometer	37
Tail lite, left	97
Tail lite, right	96
Thermo time switch	27,28
Transfer fuel pump	24
Turn signal indicator lite	43
Turn signal lite, left front	108
Turn signal lite, left rear	109
Turn signal lite, right front	110
Turn signal lite, right rear	111
Turn signal switch	105
Up-shift Indicator lite	36
Up-shift indicator control unit	36-38
Upshift switch, transmission	56
Upshift switch, vacuum	57
Voltage regulator	1,2
Voltage stabilizer	44
Voltmeter	81
Voltmeter lite	82
Washer/wiper intermittent relay	122,123
Windshield washer pump	124

Description	Current track
Windshield wiper motor	120,121
Windshield-wiper intermittent switch	122,123

Wire connectors


T1a	— single, near battery
T1b	— single, behind relay panel plate
T1c	— single, near ignition coil
T1d	— single, near brake booster
T1f	— single, behind relay panel plate
T1g	— single, under fuse/relay panel
T1h	— single, under fuse/relay panel
T1i	— single, behind dash, center
T1k	— single, under fuse/relay panel
T1l	— single, under fuse/relay panel
T1m	— single, under fuse/relay panel
T1n	— single, in luggage compartment, left
T1p	— single, near right headlight
T1q	— single, near right headlight
T1r	— single, near left headlight
T1s	— single, in luggage compartment, left
T2a	— double, behind dash, right
T2b	— double, under fuse/relay panel
T2c	— double, near ignition coil
T2d	— double, behind dash, center
T2e	— double, in engine compartment, left
T2f	— double, in eng. compart., left
T2g	— double, in eng. compart., left
T2h	— double, in eng. compart., left
T2k	— double, behind relay panel plate
T2l	— double, in rear decklid, left
T2m	— double, in engine compartment, left
T3a	— three-point, under fuse/relay panel
T3b	— three-point, behind dash, center
T3c	— three-point, under inst. panel middle
T3d	— three-point, near right headlight
T3e	— three-point, near left headlight
T6	— 6 point, on instrument cluster


Ground connections


(24)	— on cold starting valve
(30)	— beside relay plate
(42)	— beside steering column
(50)	— luggage compartment, left
(51)	— luggage compartment, right
(81)	— in dashboard wiring harness
(82)	— -1- in wiring harness, front/left
(108)	— -2- in wiring harness, front/left


Plus connections


(A4)	— (58b), in dashboard wiring harness
------	--------------------------------------

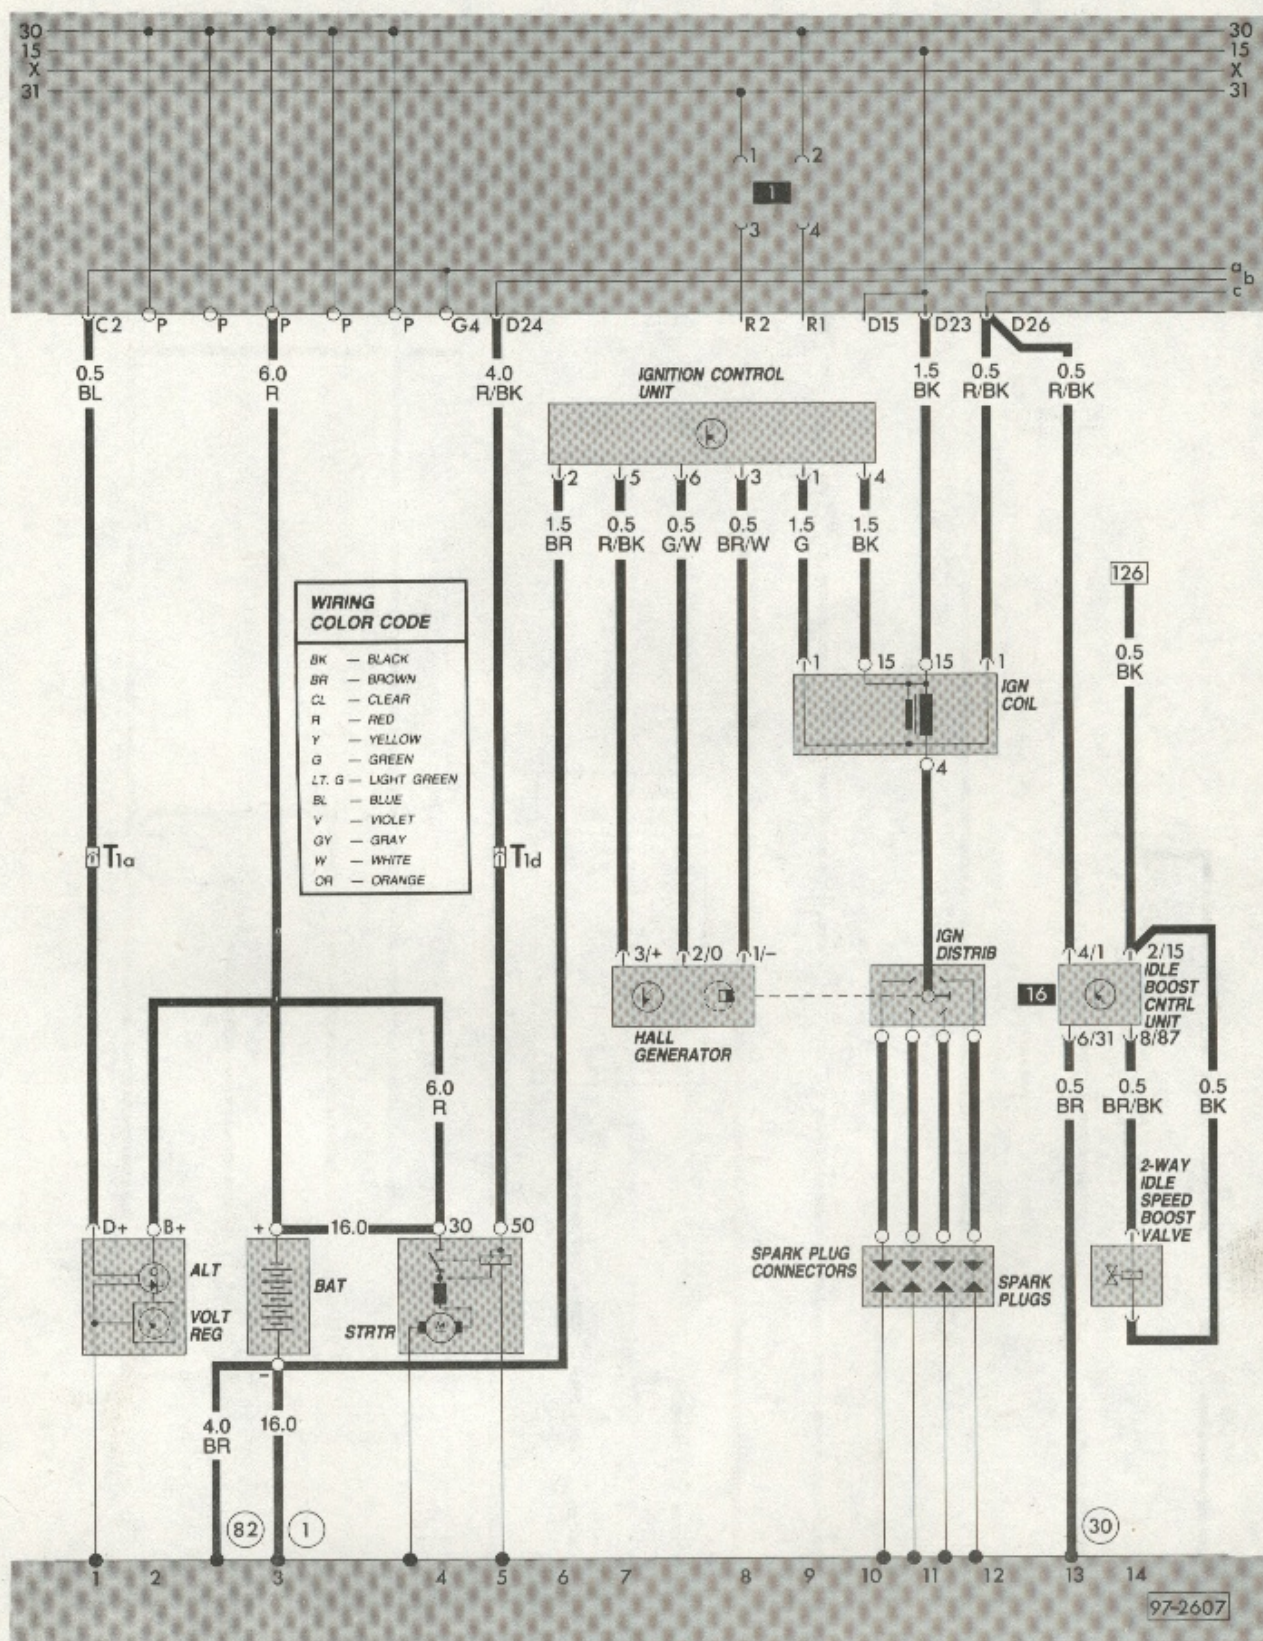


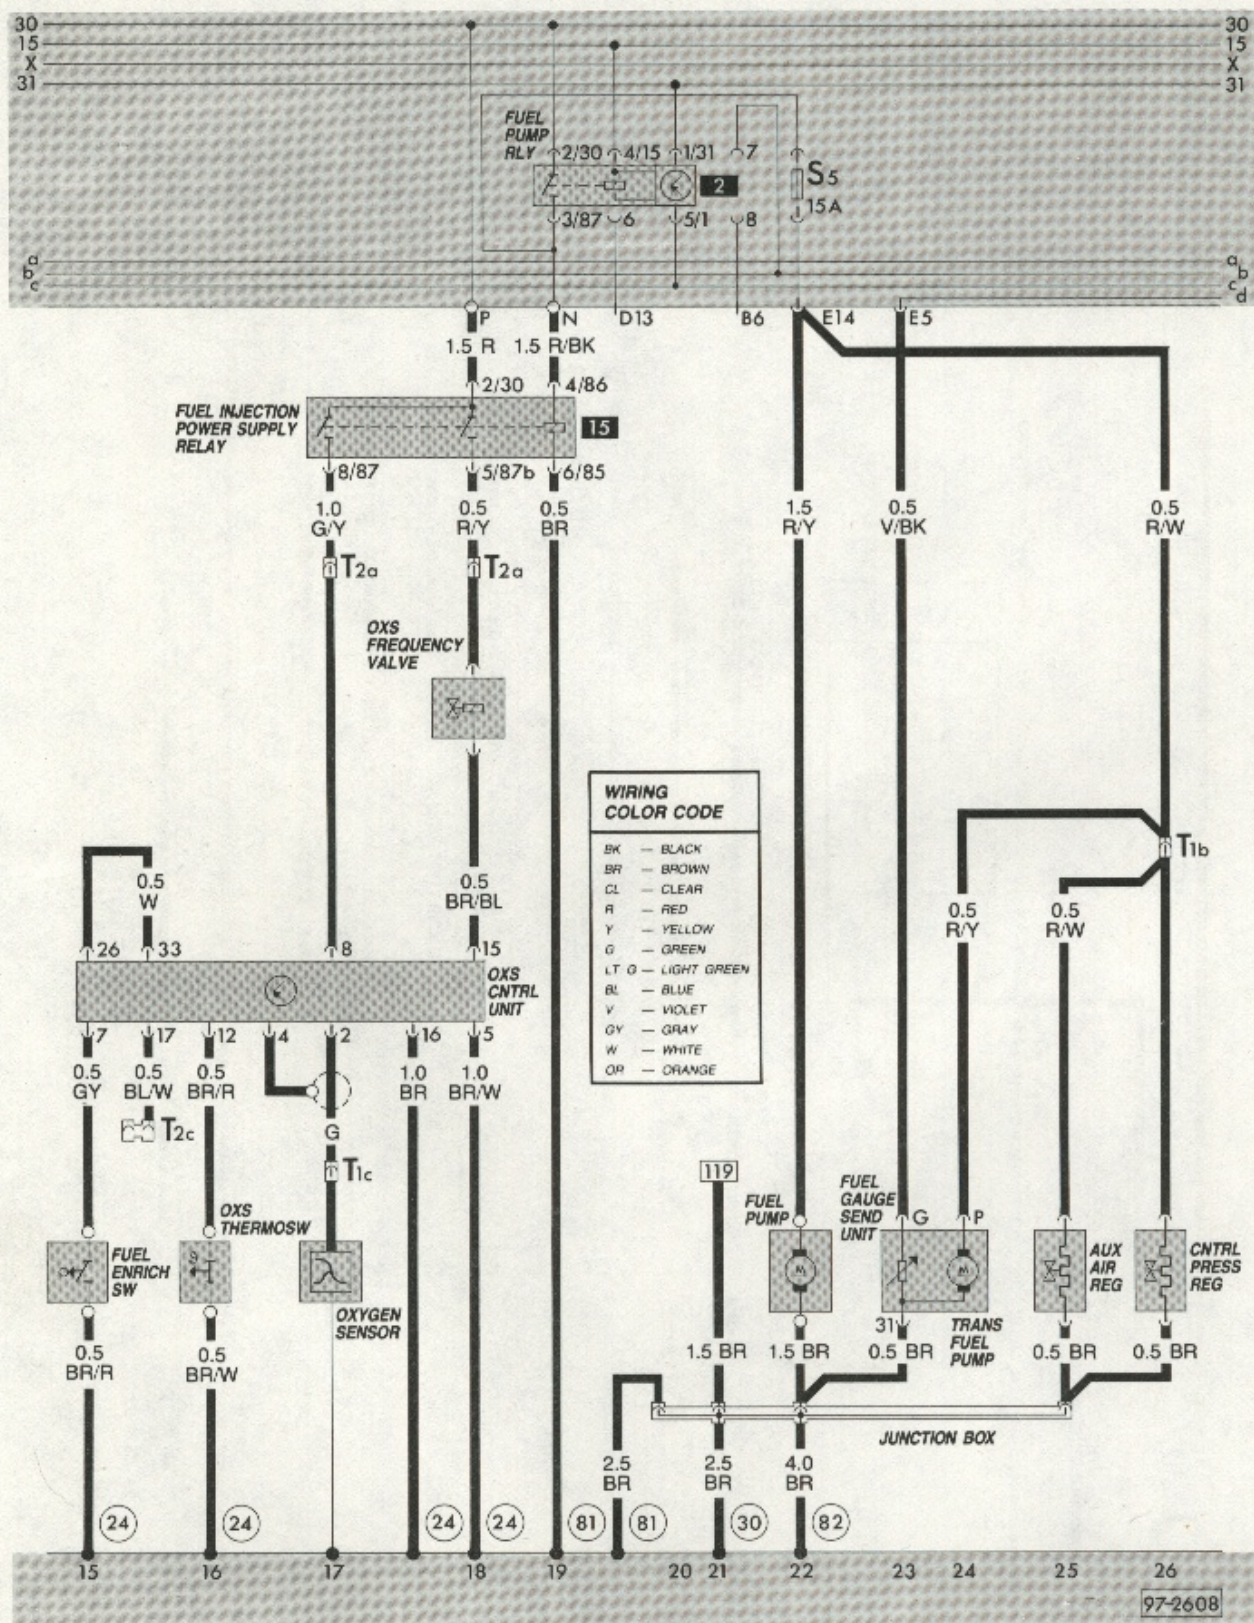



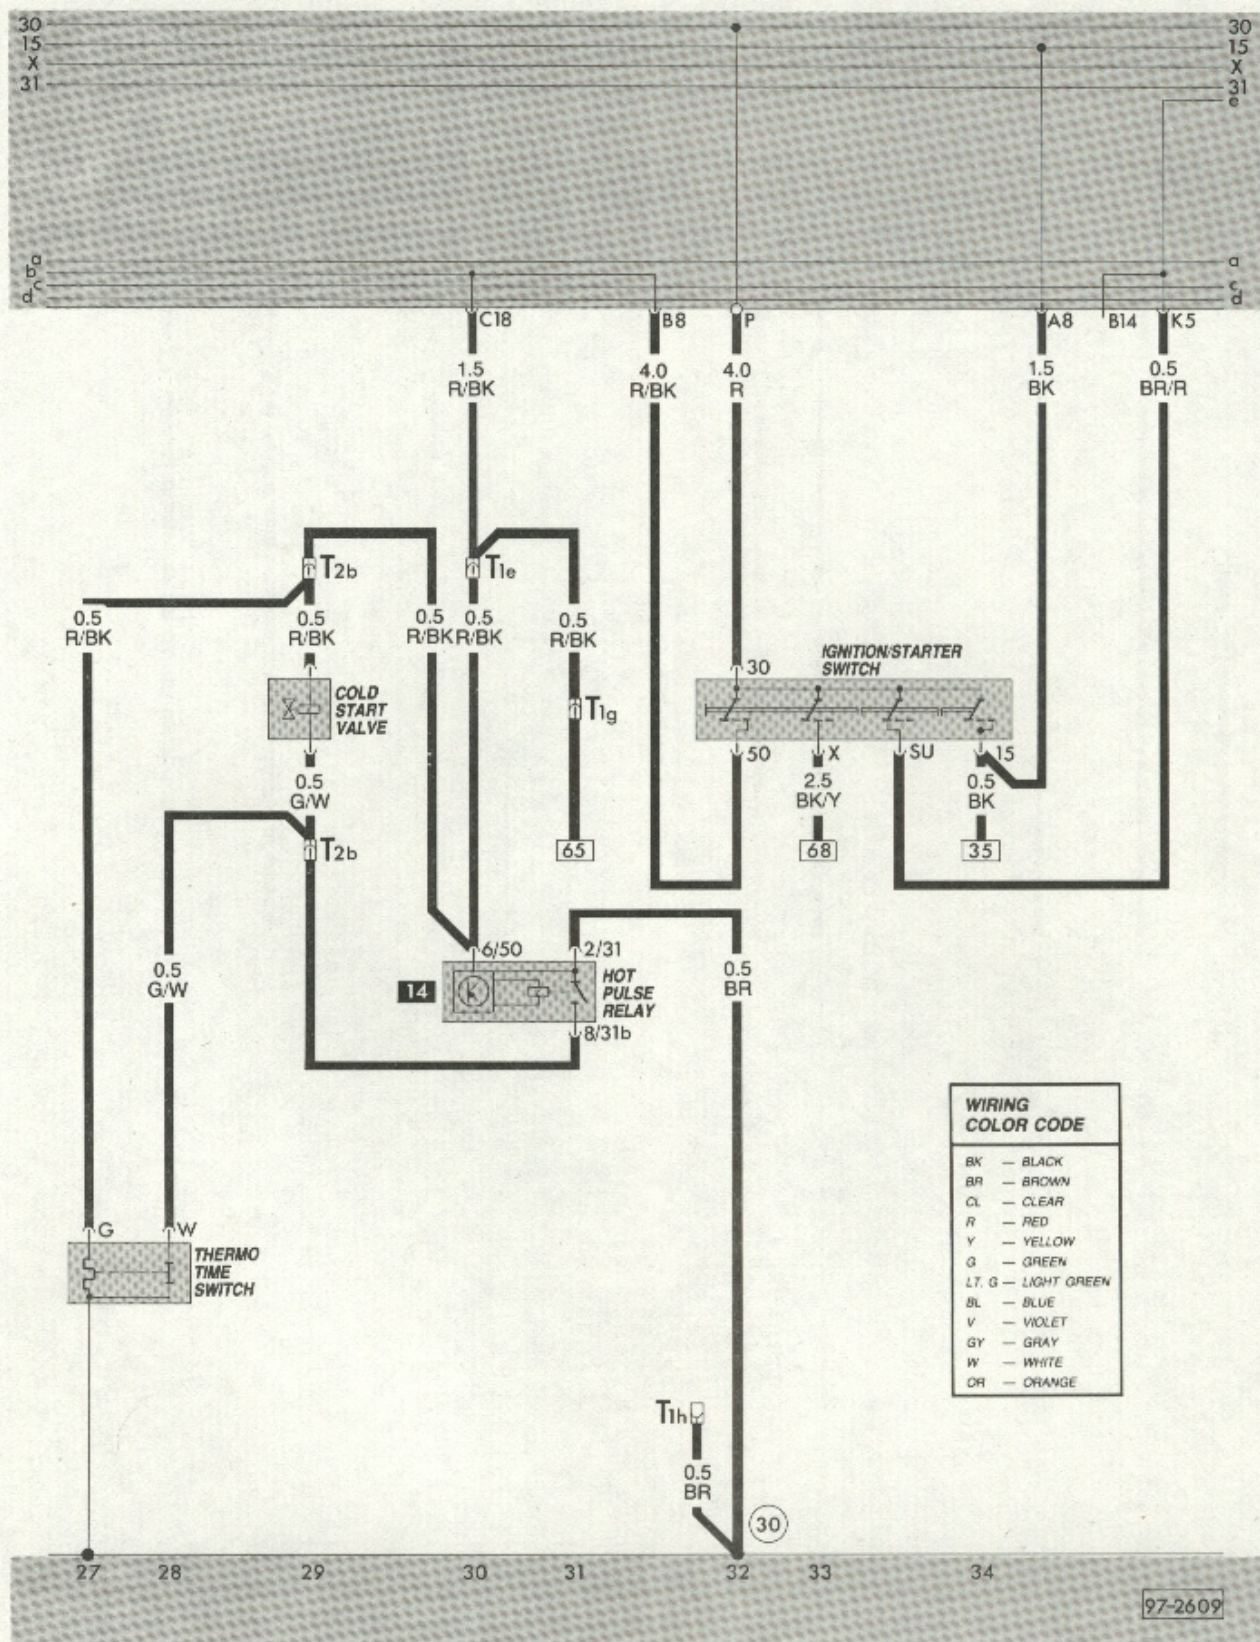


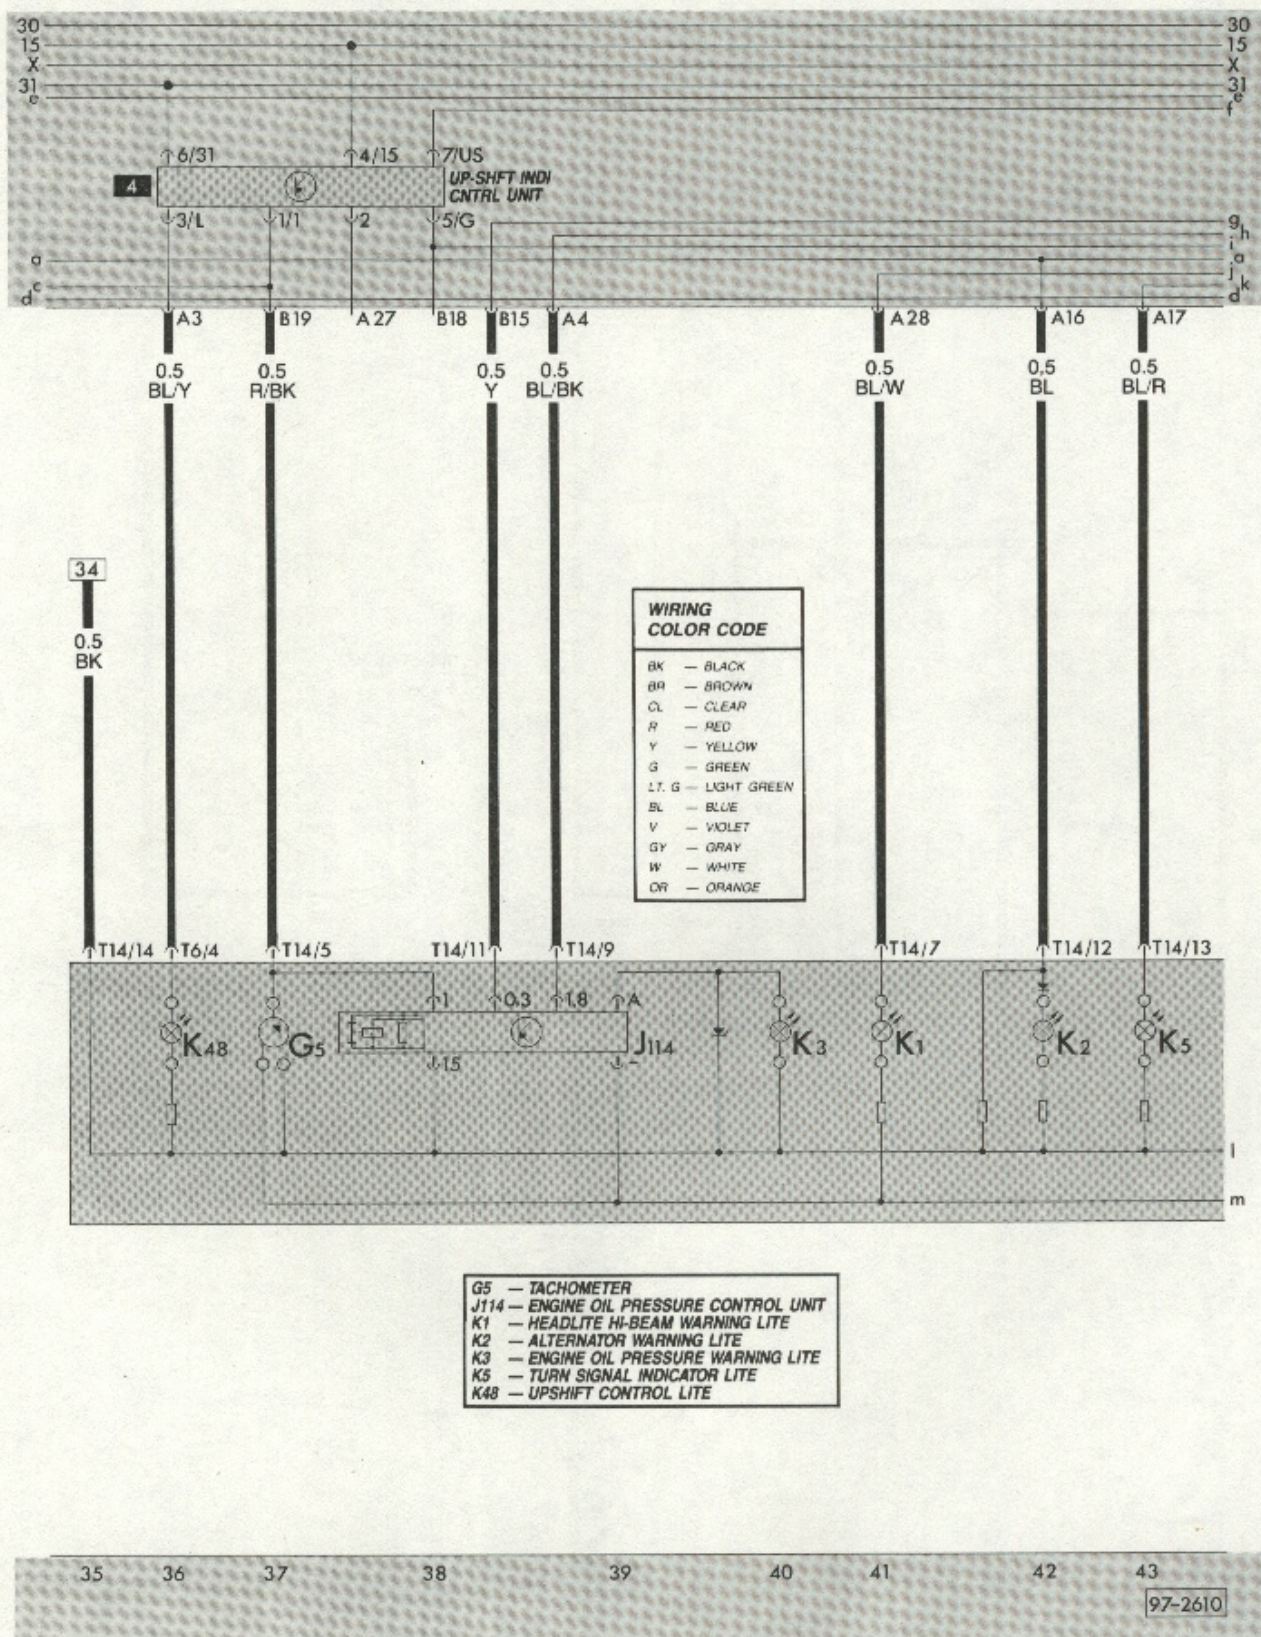

 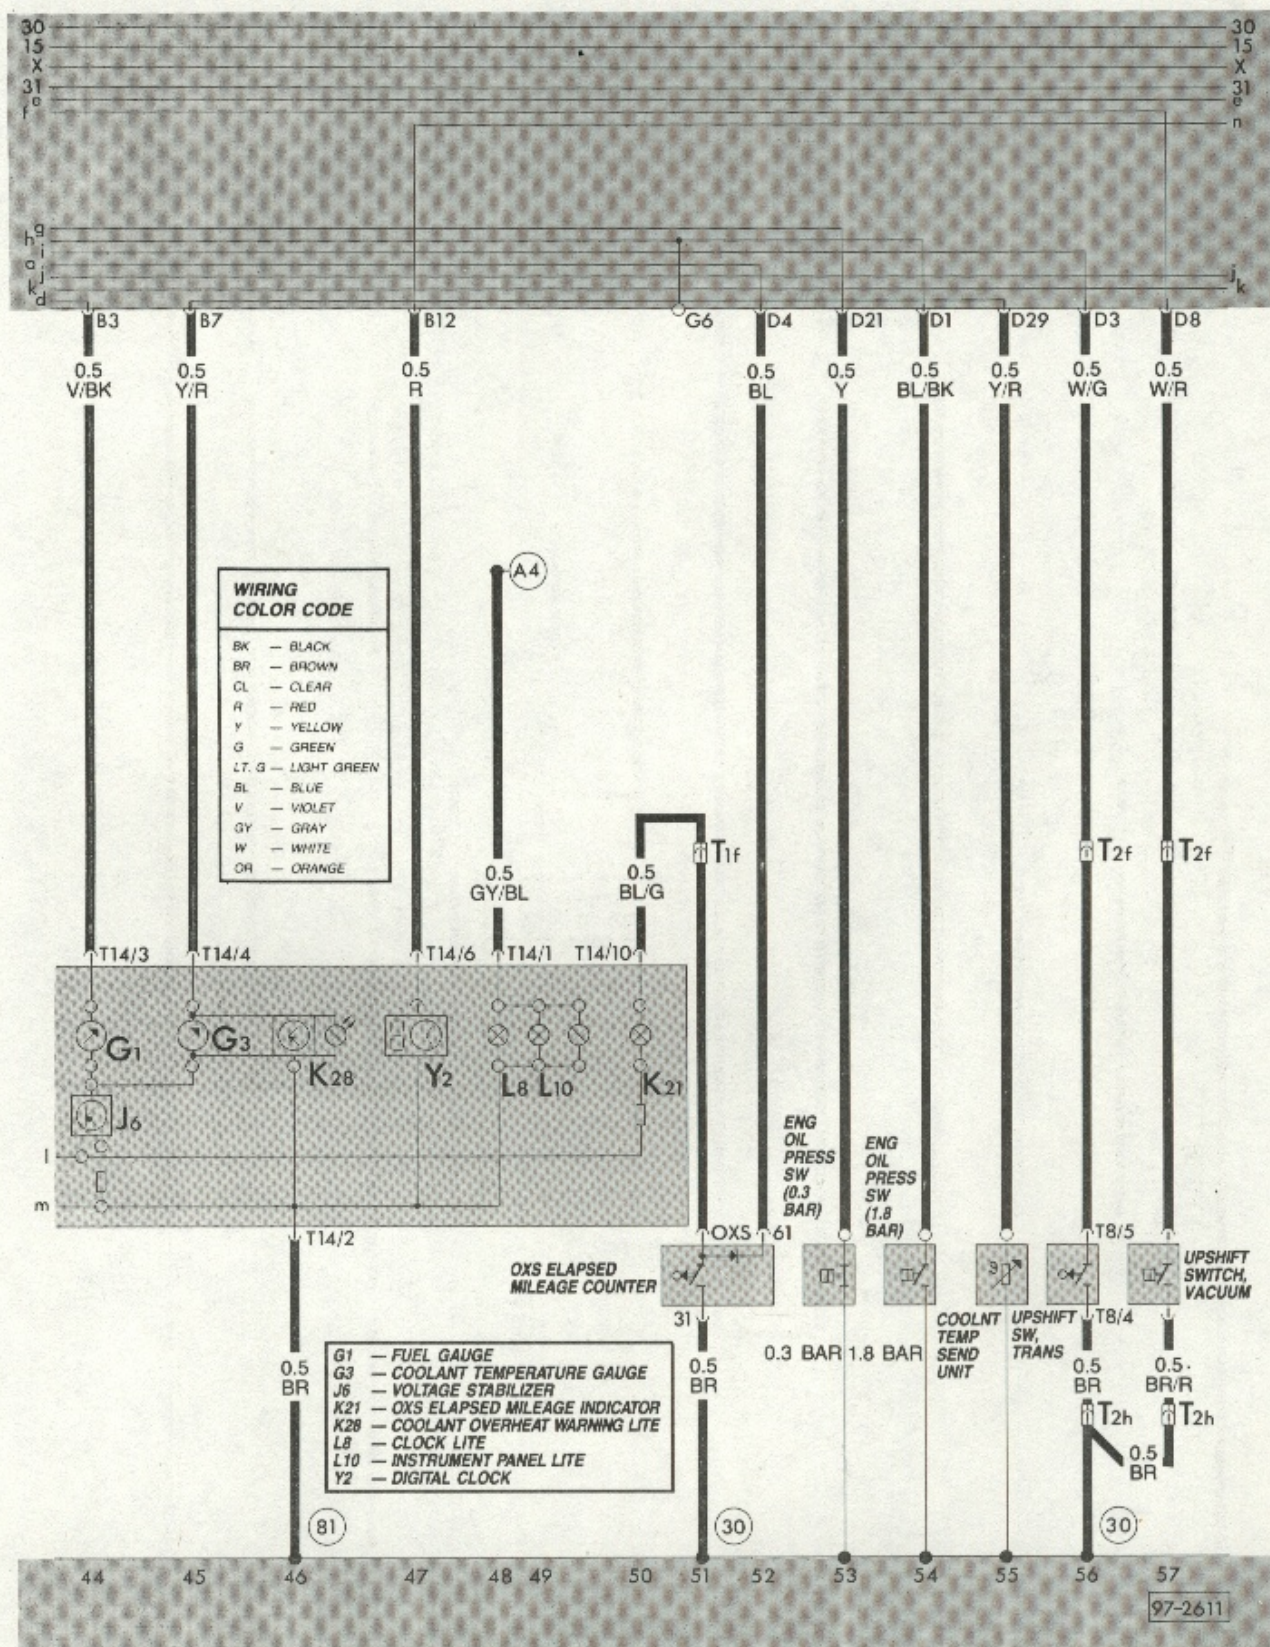

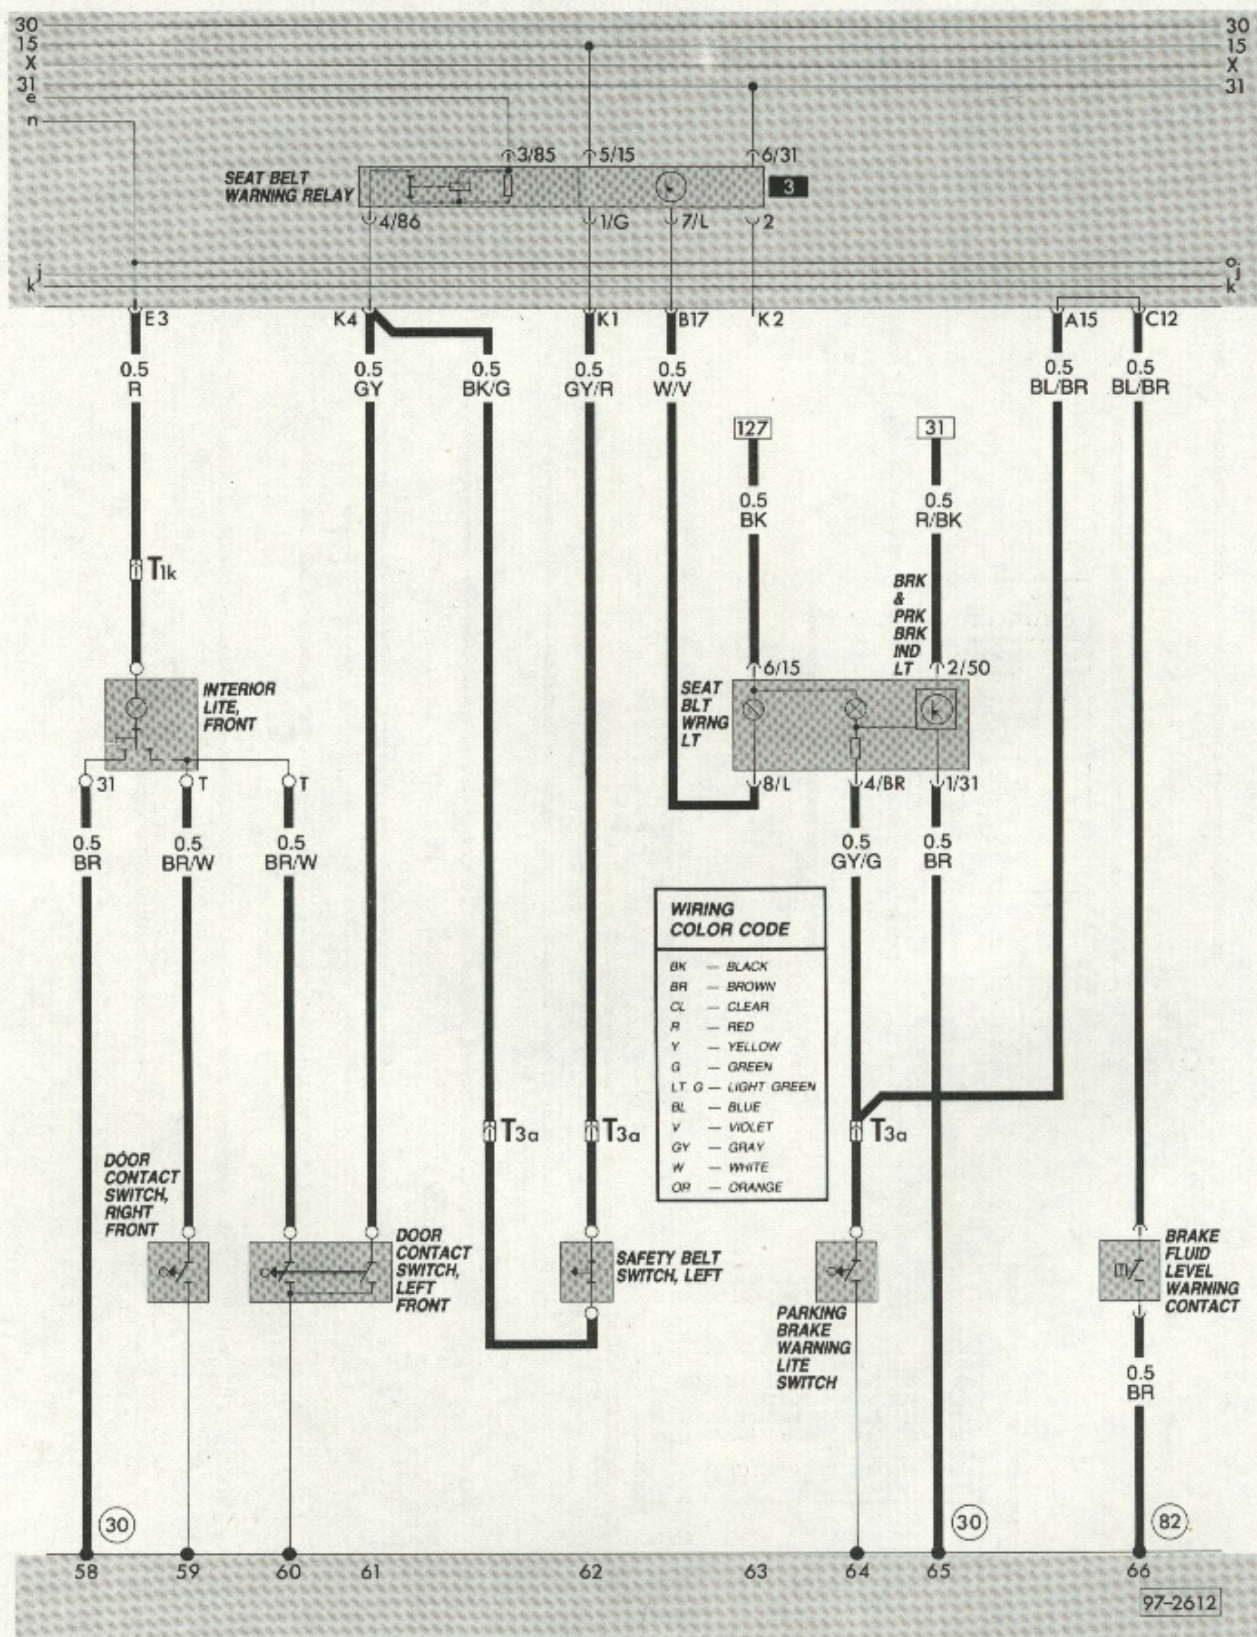



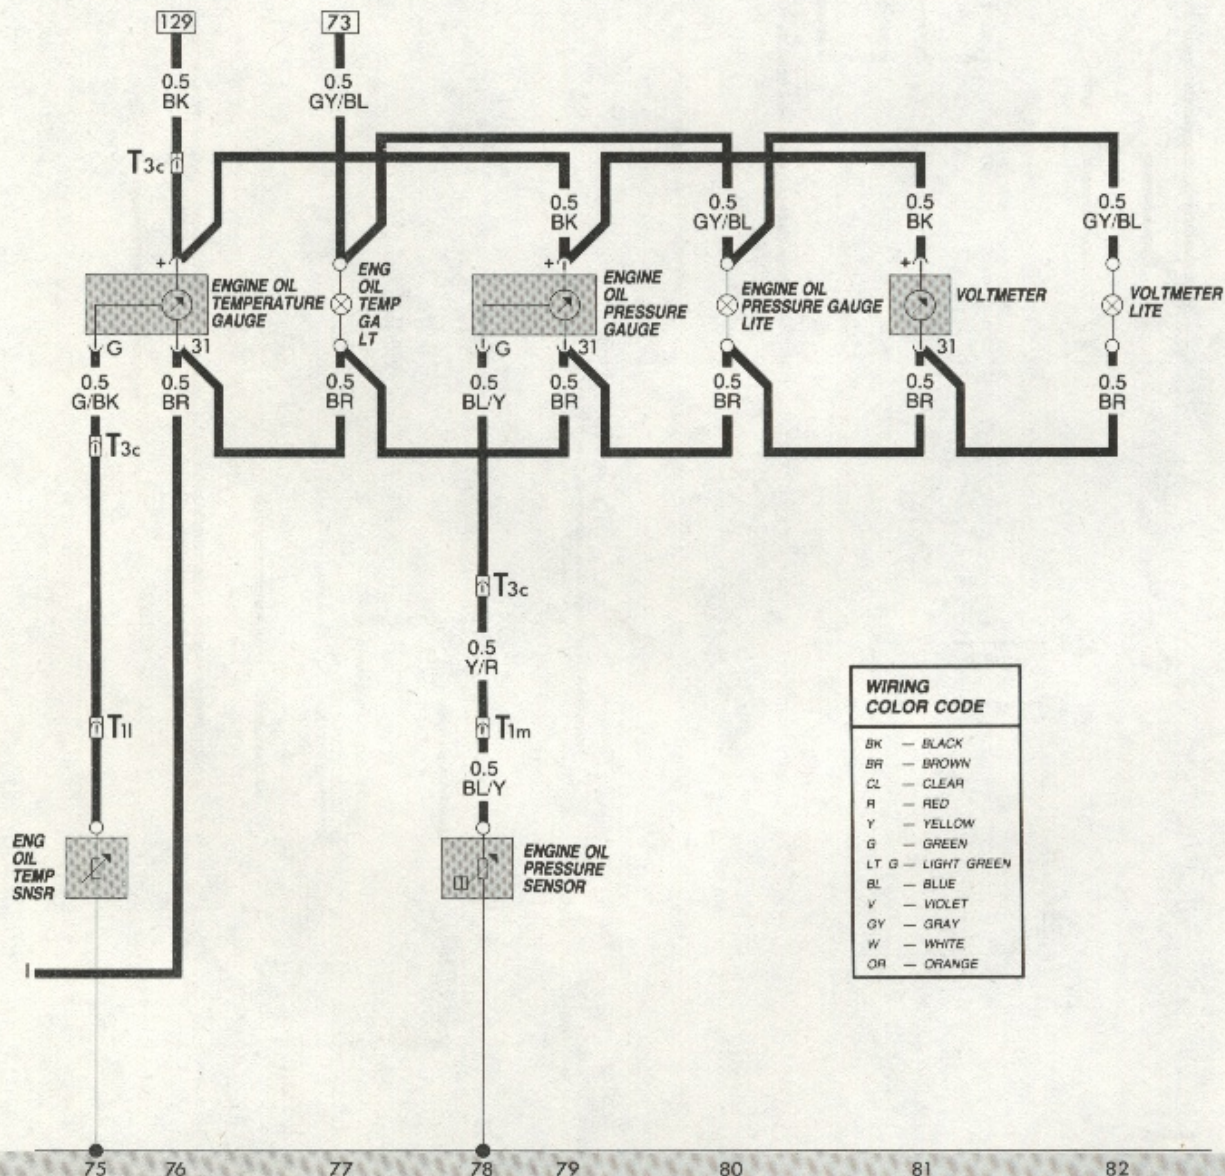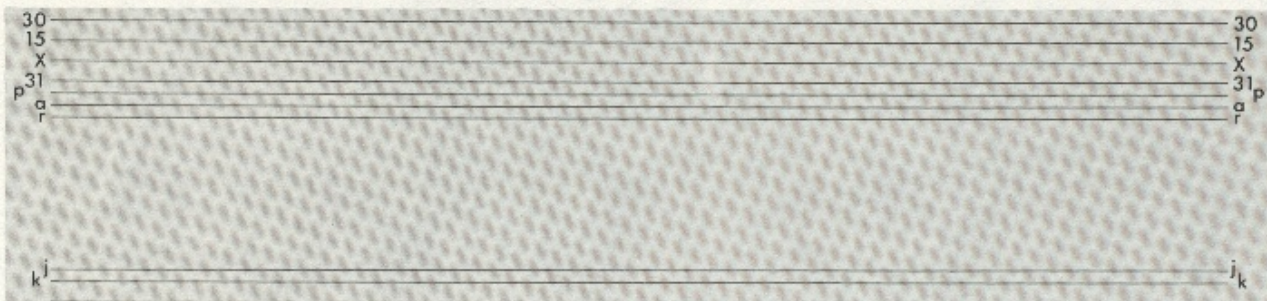

97-2614

